

















ІНСТРУКЦІЯ









**З МОНТАЖУ ГАРАЖНИХ ВОРІТ KARSTEN
(СТАНДАРТНИЙ МОНТАЖ)**


RD-200



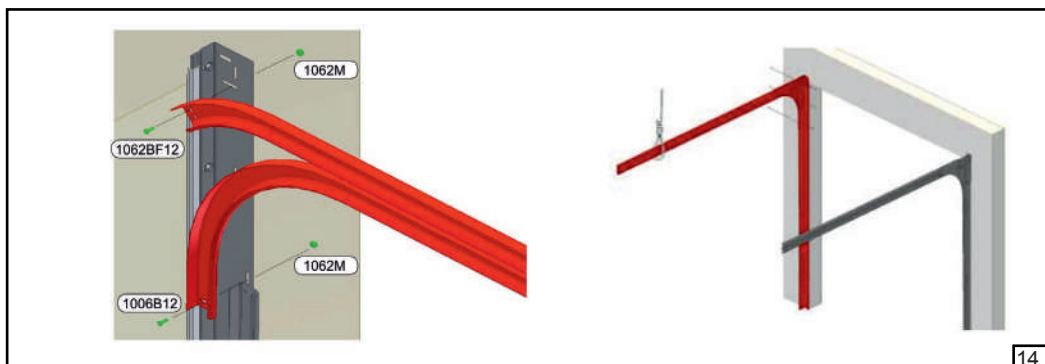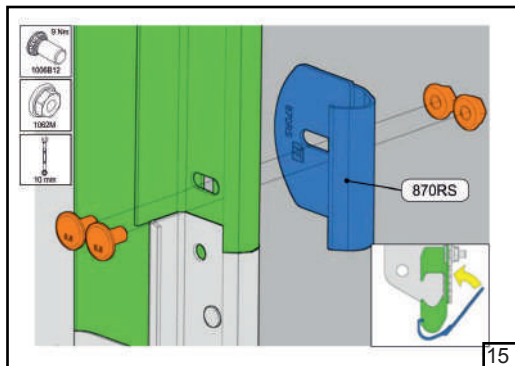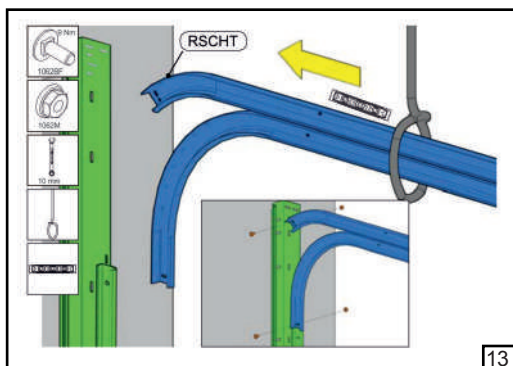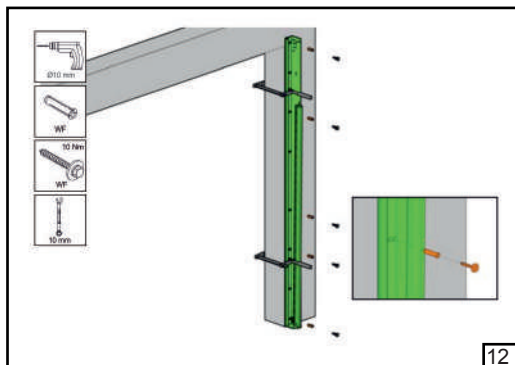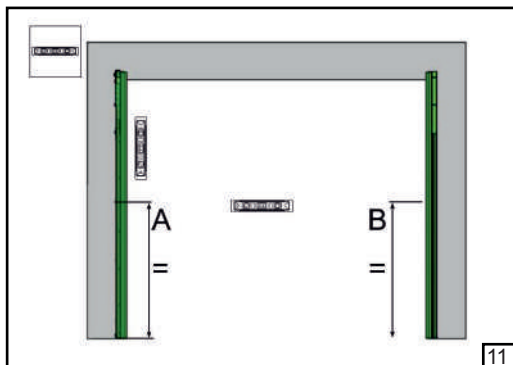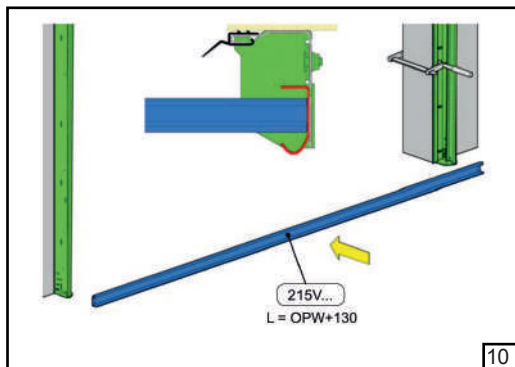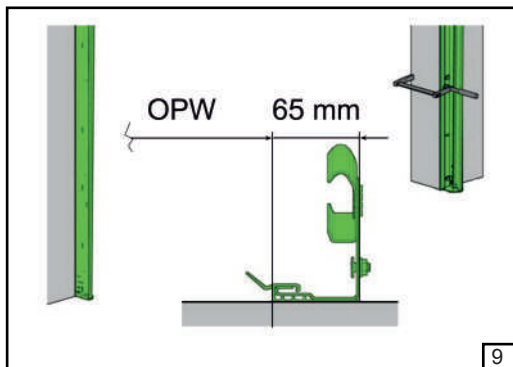


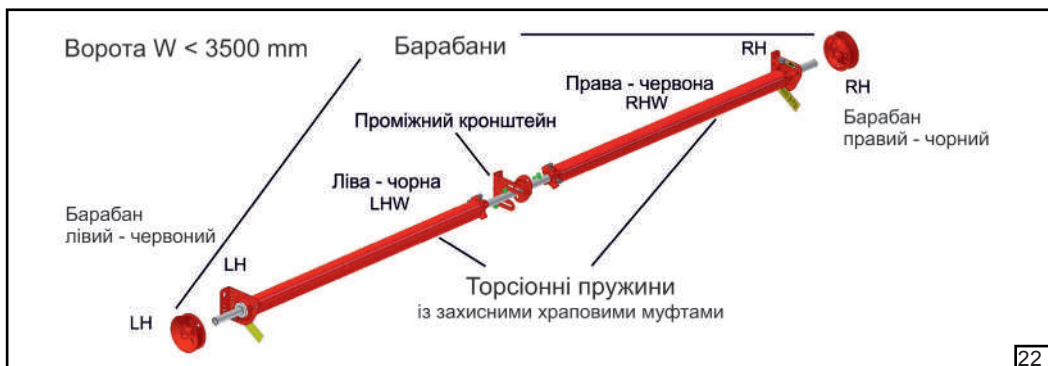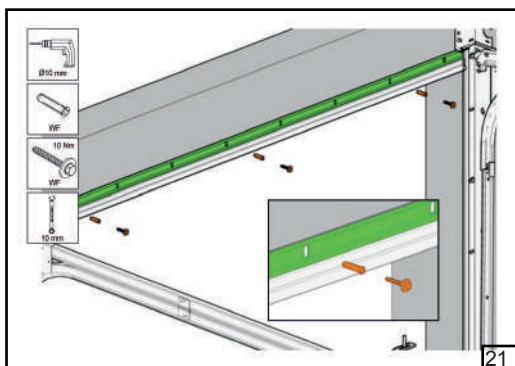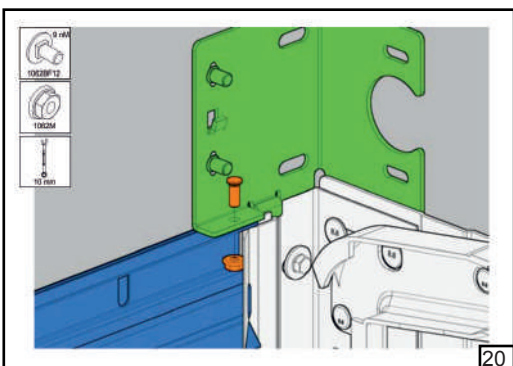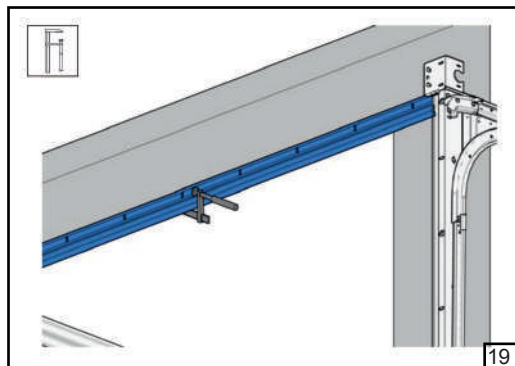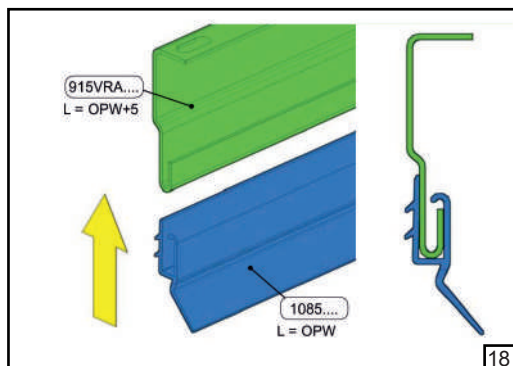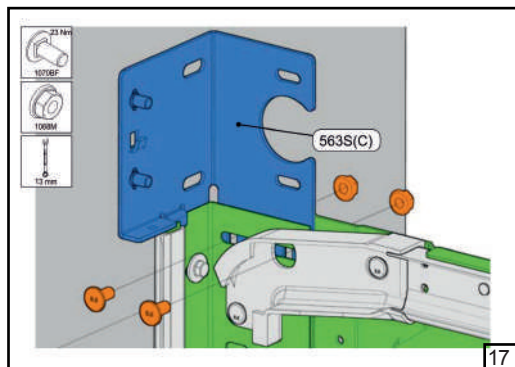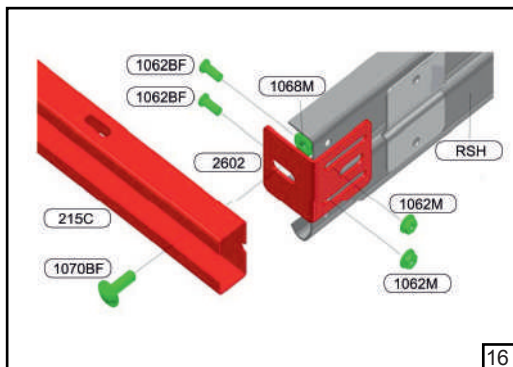

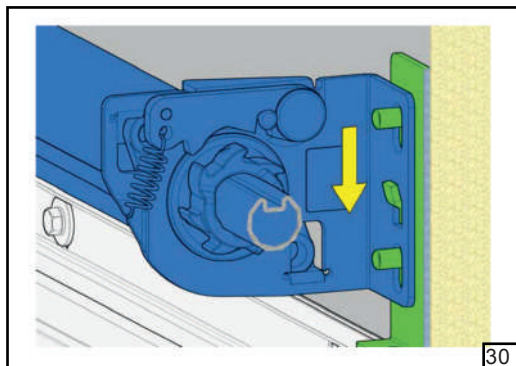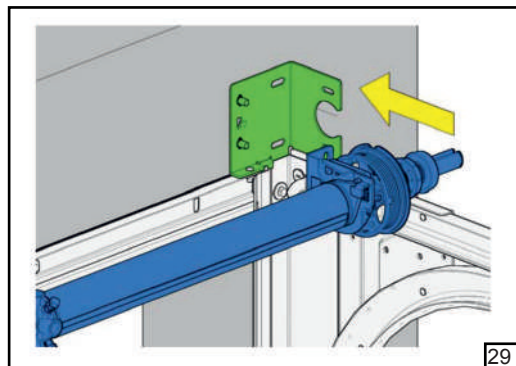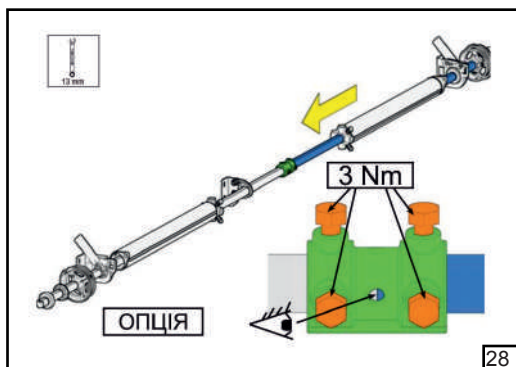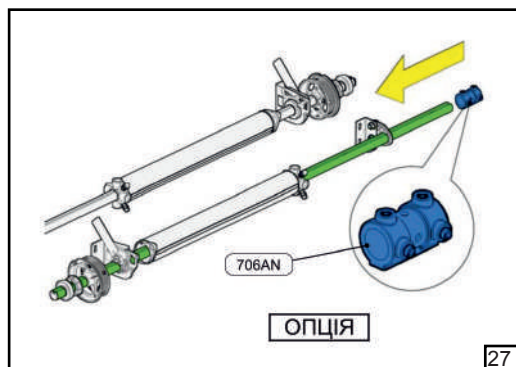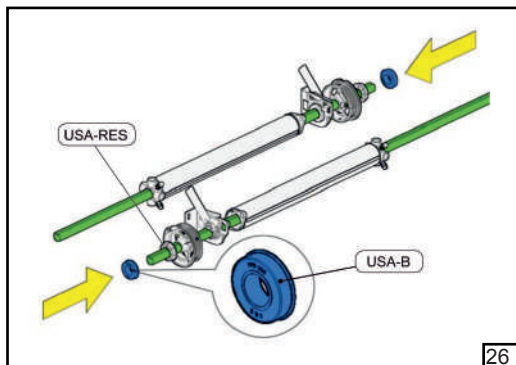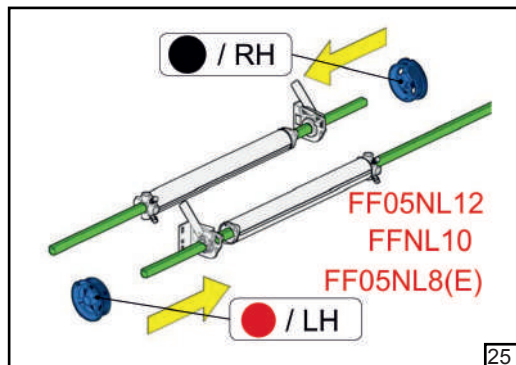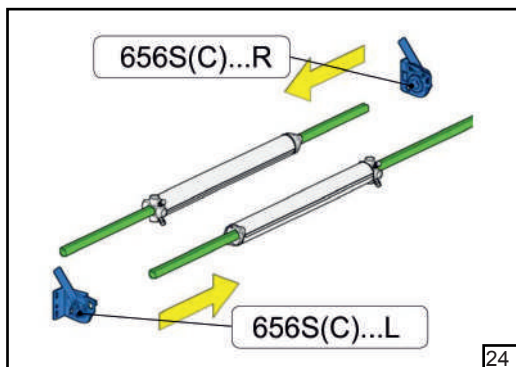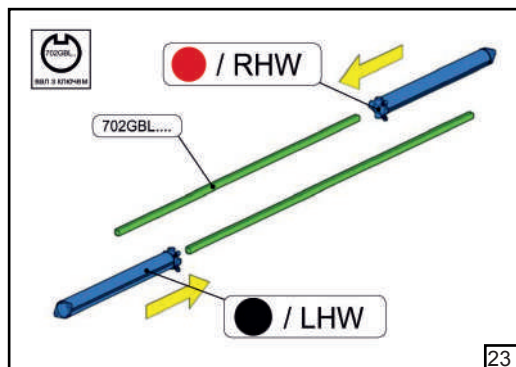


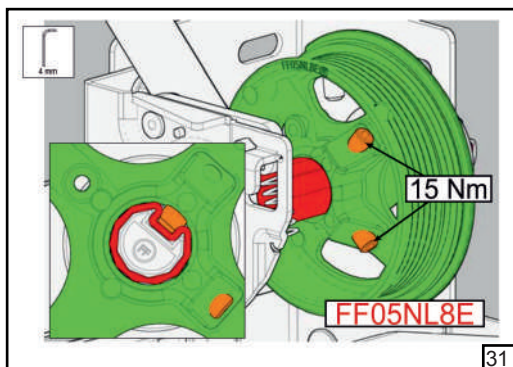


31

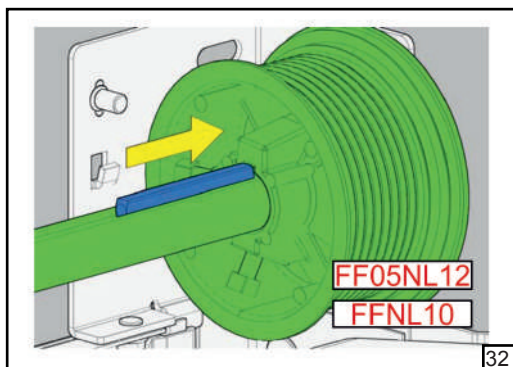


32

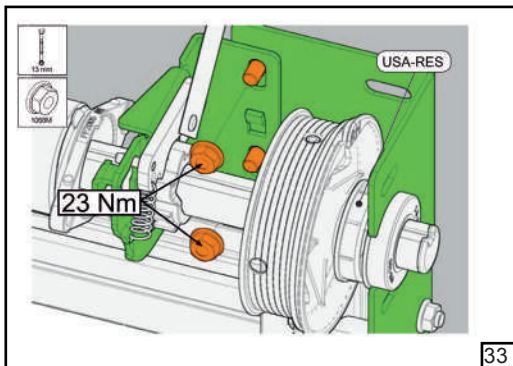


33

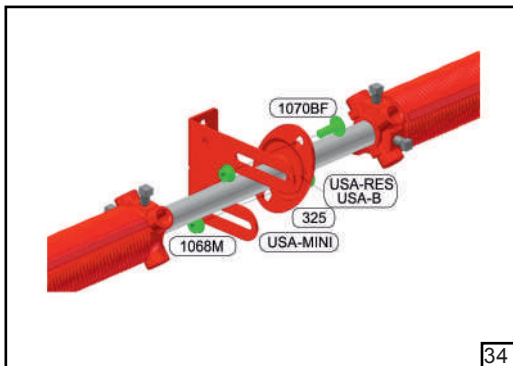


34

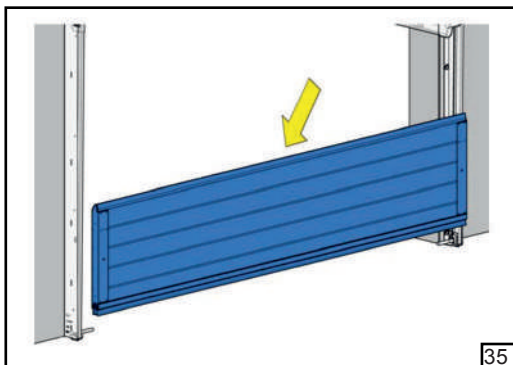


35

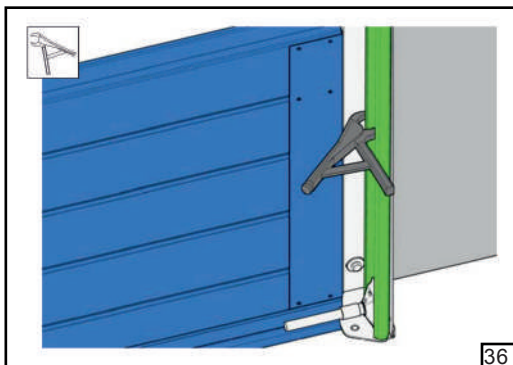









36








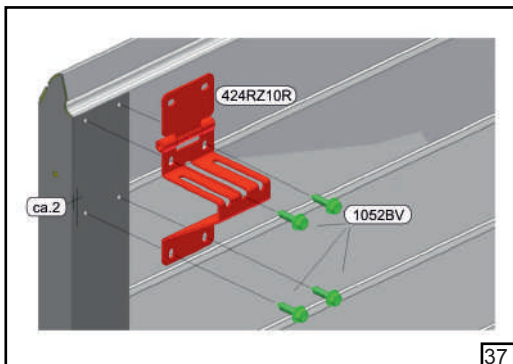



37

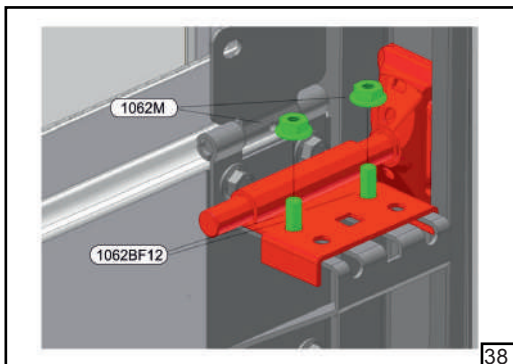


38

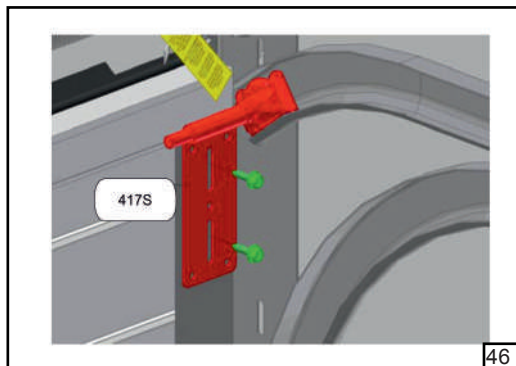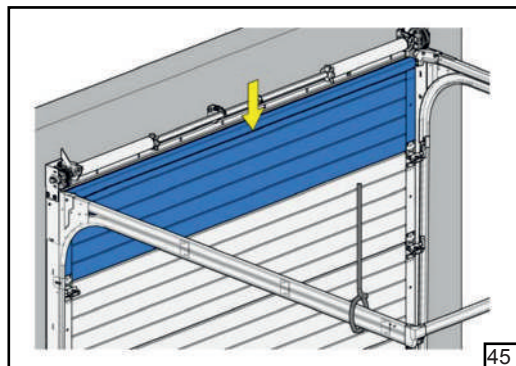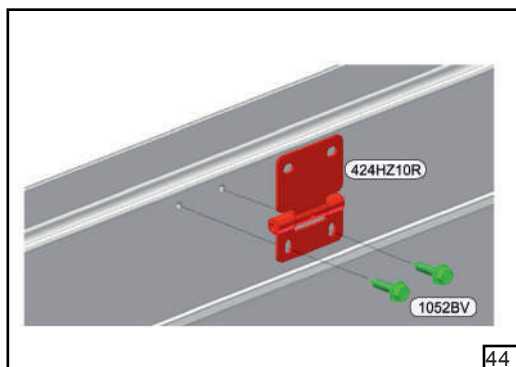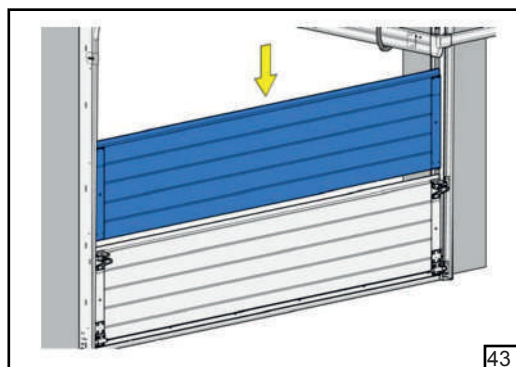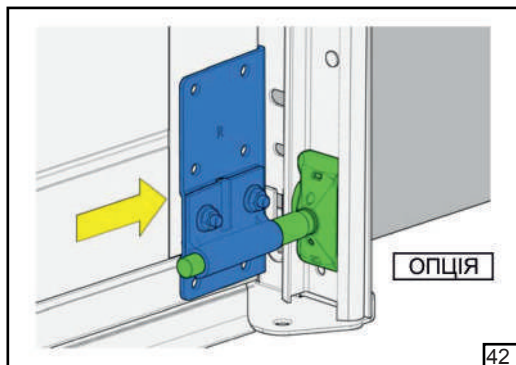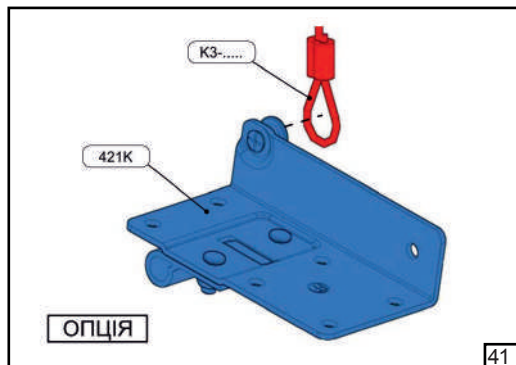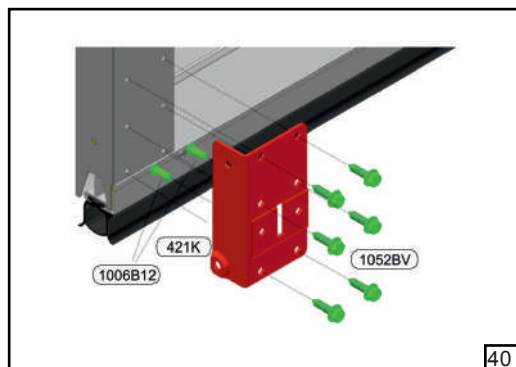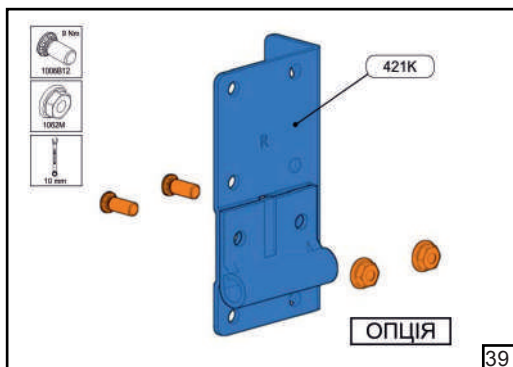

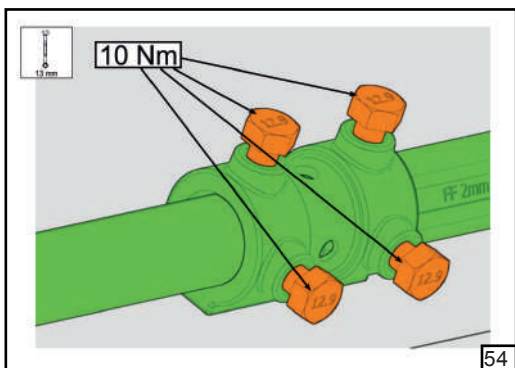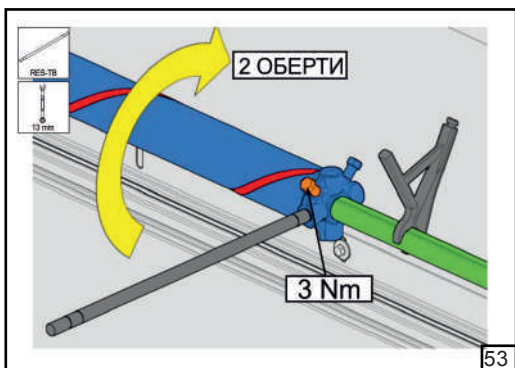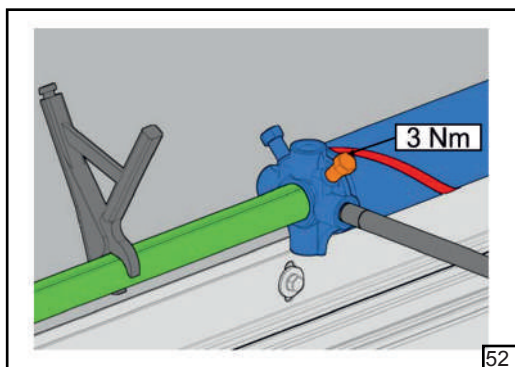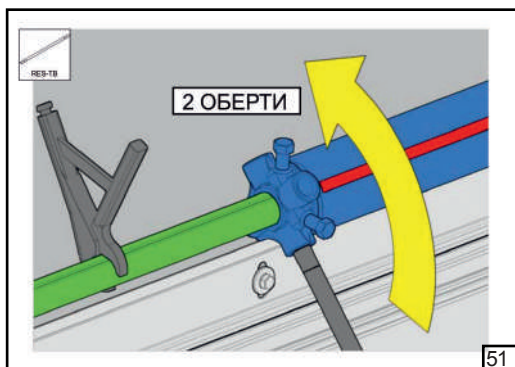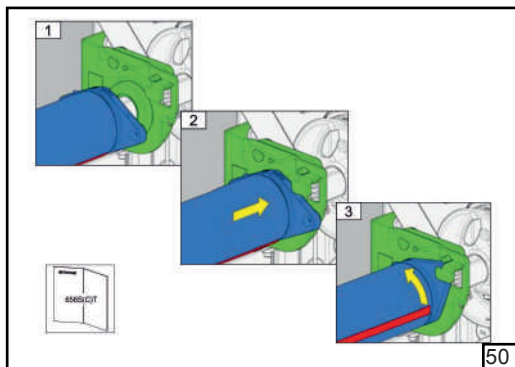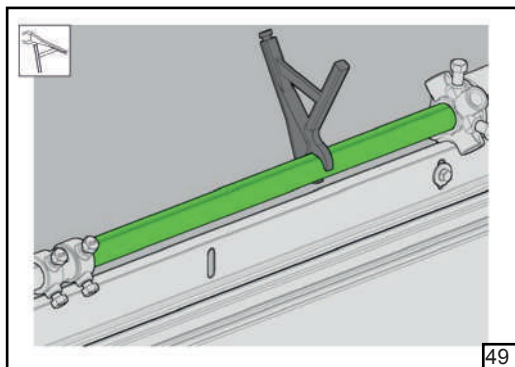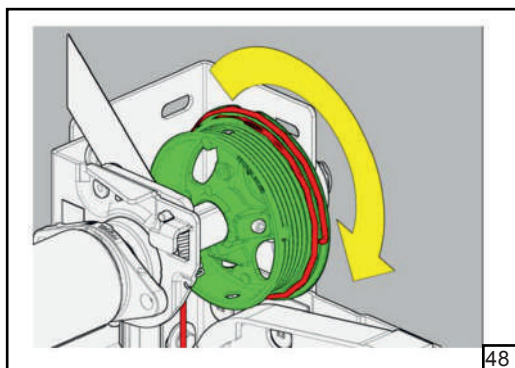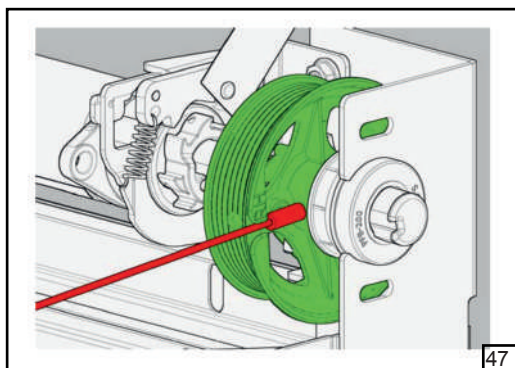


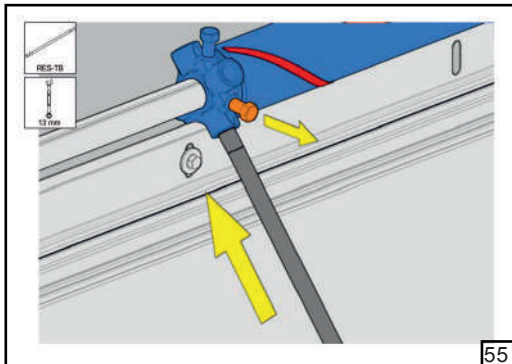


55

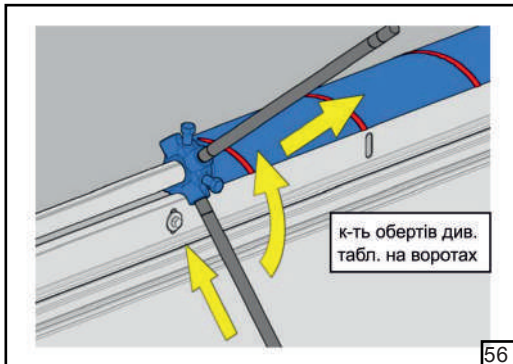


56

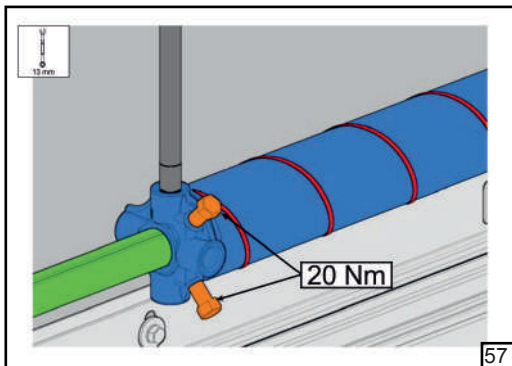


57

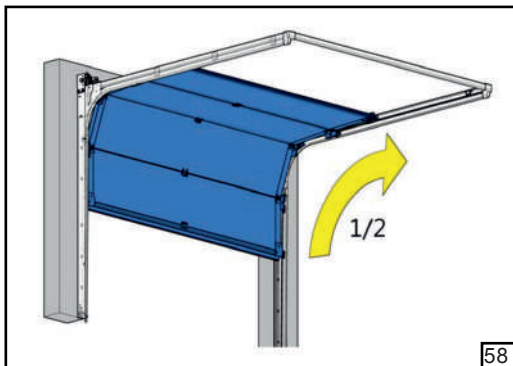


58

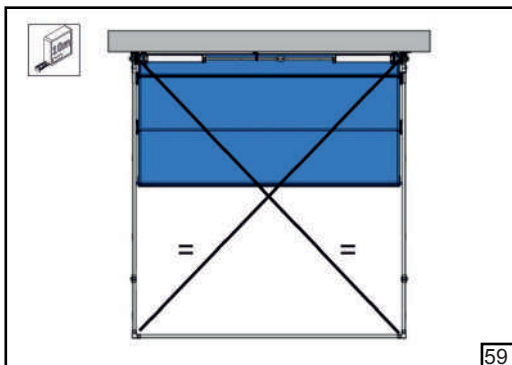


59

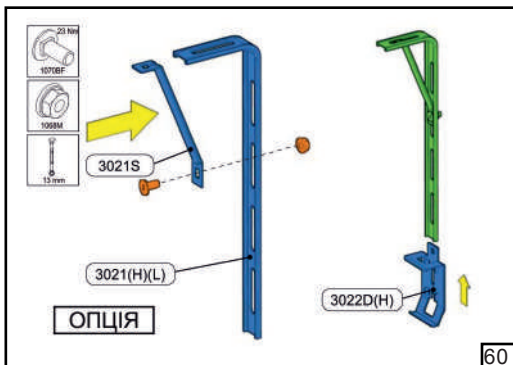









60

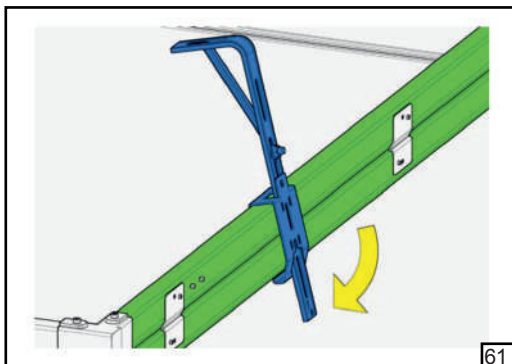


61

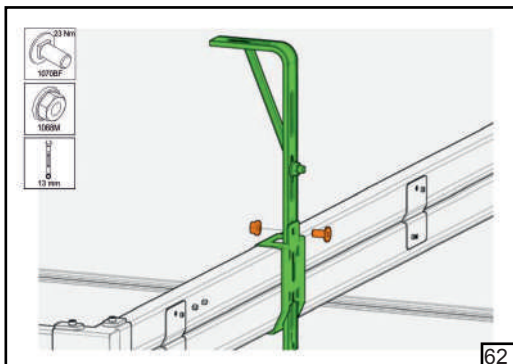


62

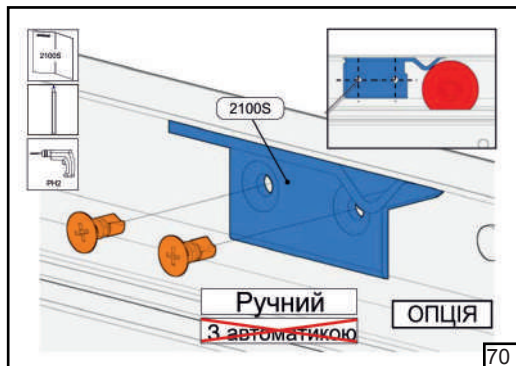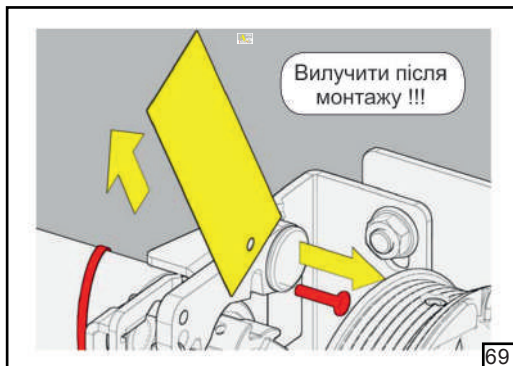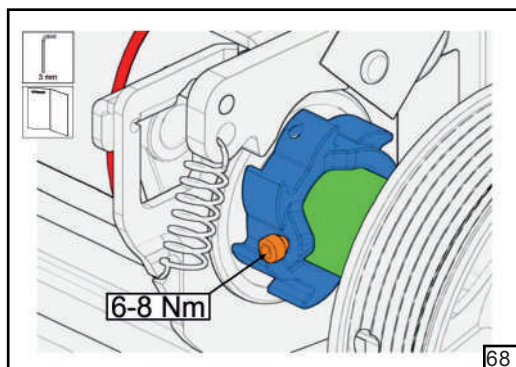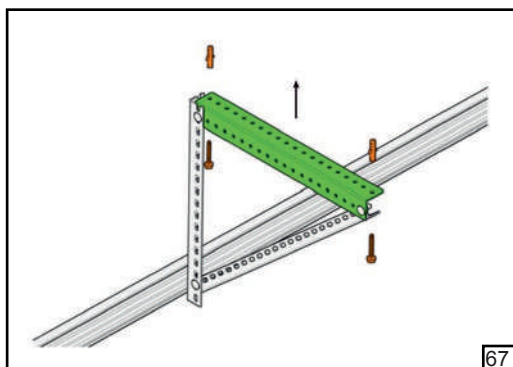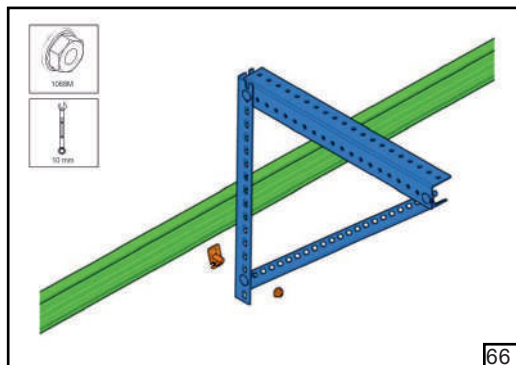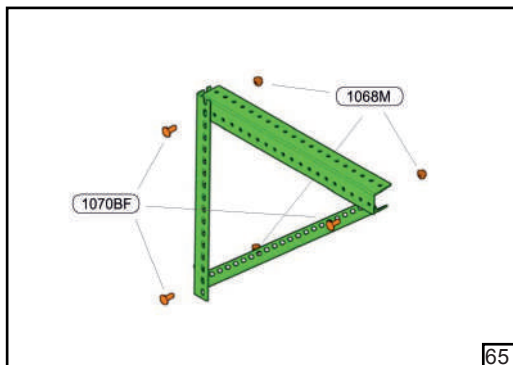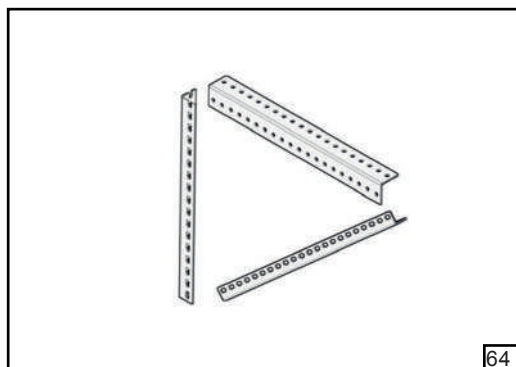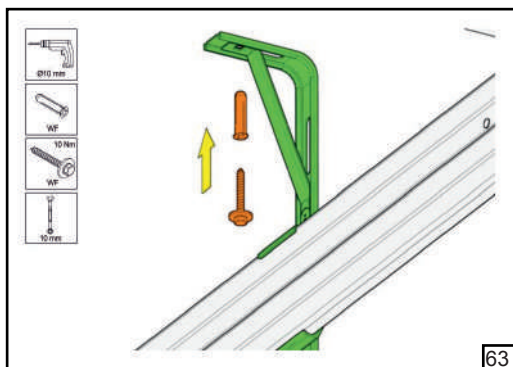


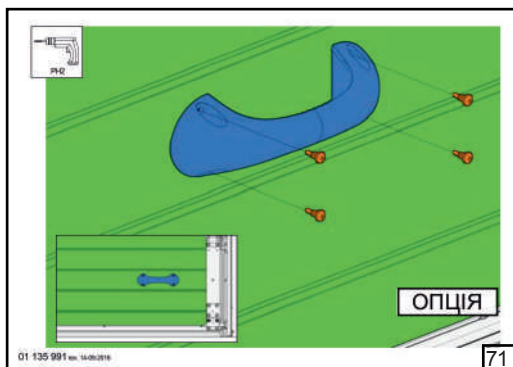


71

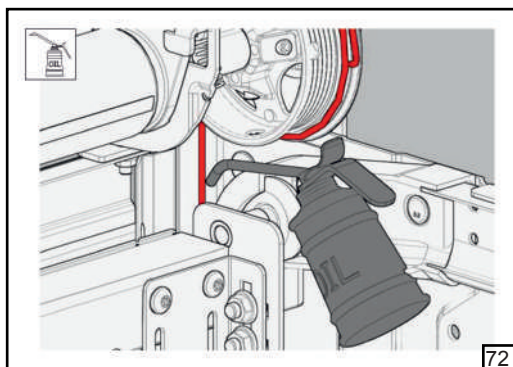

72

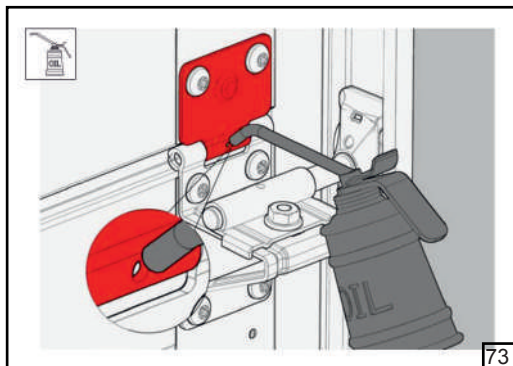

73

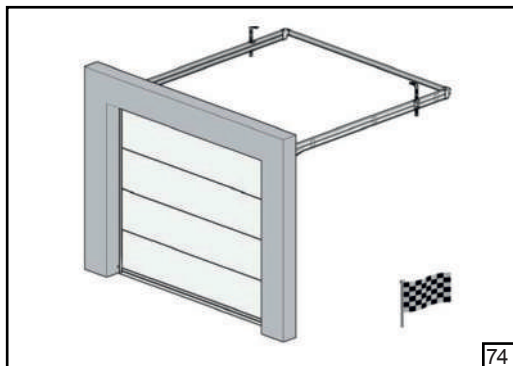

74